

HEVAC CONTROLS 1.5 INCH DIGITAL PHOTO FRAME USERS MANUAL

Rear Panel Button Functions & External Plugs:

MENU Key:

Press and hold this button down for 5 seconds to switch the device ON.

The **MENU** key is also used as an Enter key for confirming other setup options.

UP Key:

This button is used to scroll FORWARDS through all Menu functions and to scroll forwards through your pictures.

DOWN Key:

This button is used to scroll BACKWARDS through all Menu functions and to scroll backwards through your pictures.

USB Interface:

For connection to your PC using the Photo Viewer Software to Upload and Download Pictures.

Also used to charge your Photo Frame.

(Note: You can download the most recent version of the Photo Viewer software by going to the HEVAC Controls website www.hevac.com.au and navigate to the Downloads Page.)

RESET Button:

By using a paper clip, pressing this button will restore your HEVAC Photo Frame back to factory Defaults.

Menu Functions:

While the Photo Frame is switched ON pressing the **MENU** Button once will take you to setup menu.

Using the **UP** or **DOWN** keys will scroll through the menu items and pressing the **MENU** key will accept the selected menu item.

If no keys are pressed within 30 seconds the Photo Frame will exit the setup menu and revert back to displaying your Picture Slide Show.

OFF:

With this menu item selected pressing the **MENU** key will switch the device OFF.

DISPLAY MODE:

With this menu item selected pressing the **MENU** key will take you to the Display Mode menu, here you have two options:

AUTO SLIDE: Automatically displays your photos as a slideshow you can select the time between photos from 01 to 120 seconds.

Or

MANUAL SLIDE: In this mode you will have to scroll through your photos manually by pressing the **UP** or **DOWN** buttons.

Continued overleaf.....

Continued from previous page.....

CLOCK SET:

With this menu item selected pressing the **MENU** key will display the time and date, by pressing the **UP** or **Down** buttons you can adjust the time and date and by pressing the **MENU** button this will accept the current setting and move on to the next setting.

(Note: The date is in the following format YYYY-MM-DD and the time is in 24 hour format)

AUTO ON/OFF:

With this menu item selected pressing the **MENU** key will take you to the **AUTO/ON/OFF**

Menu, here you have two options:

AUTO ON/OFF = ON You can set an **ON** time and on **OFF** time for your Photo Frame for example you can make it automatically switch on at 08:30 and switch off 17:00.

Or

AUTO ON/OFF = OFF This option will disable the automatic switch on and off times.

CLOCK DISPLAY:

With this menu item selected pressing the **MENU** key will take you to the **CLOCK DISPLAY** menu, here you have two options:

DISPLAY CLOCK = NORMAL This will display the time and date on the main screen and will not revert back to displaying photos until you press the **MENU** button.

Or

DISPLAY CLOCK = WATER MARK This will display the time as a watermark on the bottom right hand corner of the screen.

LCD CONTRAST:

With this menu item selected pressing the **MENU** key will display the **LCD CONTRAST** menu, here you can select a contrast level from 01 to 10 by pressing the **UP** or **DOWN** keys.

DELETE:

With this menu item selected pressing the **MENU** key will take you to the **DELETE MENU** in this menu mode you can delete the current picture displayed by accepting the **YES** or **NO** prompt.

EXIT:

With this menu item selected pressing the **MENU** key will exit the setup menu.

Battery Charging:

When the battery is low the screen will display **LOW POWER**. Connect your Photo Frame to your PC using the provided USB cable to recharge the internal battery.

Technical Assistance:

If you are experiencing any difficulties in using your Photo Frame please give us a call.

HEVAC Control Agencies Pty Ltd call on 03 9562-7888 or email us at technical@hevac.com.au